THE SHARPER IMAGE®

Turbo-Groomer® 5.0

SI639

Instructions

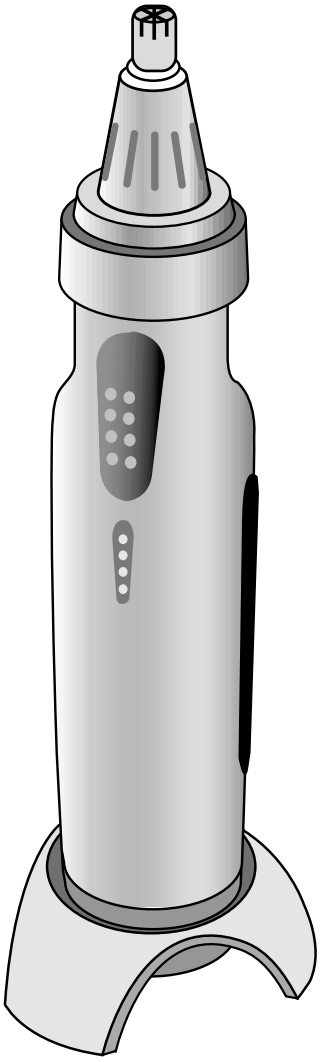

SHARPER IMAGE DESIGN™

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service,
or go to **www.sharperimage.com**,
our complete online store.

Battery Installation

1. To unlock battery compartment, rotate the battery cover.
2. Install two C alkaline batteries as indicated in the figure below.
3. Replace the cover. (Do not overtighten.)

Note: Do not continue to use this product if any part appears to be damaged.

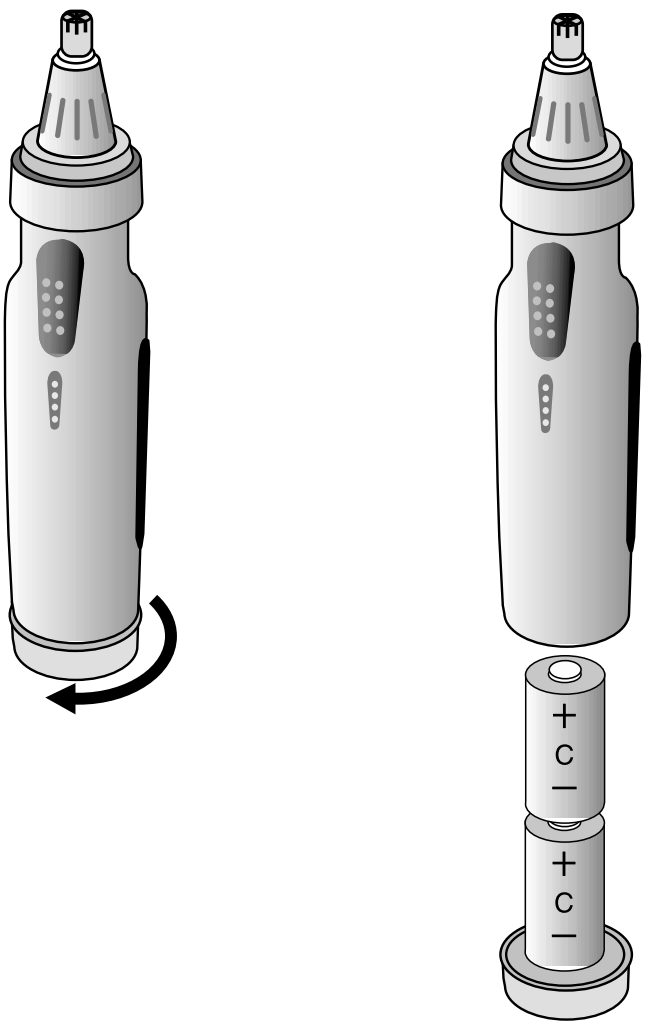

Operation

The Turbo-Groomer® 5.0 comes with two trimming heads. A shielded head trims away unwanted hair inside the nose and in and around the ears. The clipper head can be used to trim the hairline around the ears, an uneven sideburn or mustache.

To activate the clipping blades and built-in light, press the upper portion of the black **POWER ON/OFF** button.

To turn the blades and light off, press the lower portion of the black **POWER ON/OFF** button.

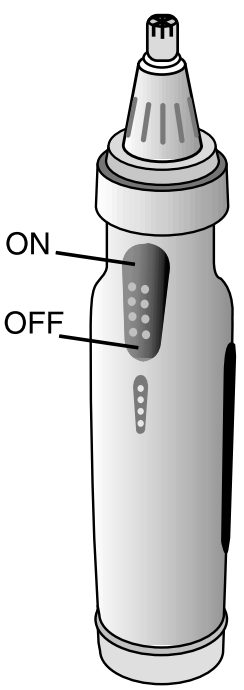

Operation

To release the attached head from the unit, twist it 1/4 of a turn counterclockwise. To attach the desired head, place it over the motor shaft and twist it 1/4 of a turn clockwise.

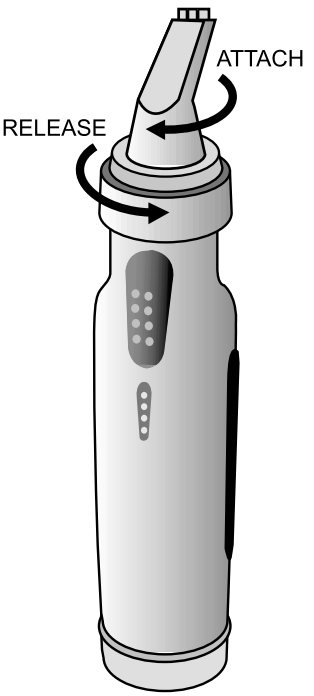

Cleaning

Method 1:

Immerse the head of the unit in a container of water or a partially filled sink. To activate the unit's Turbo-Clean feature, press the black **POWER ON/OFF** button.

Cleaning

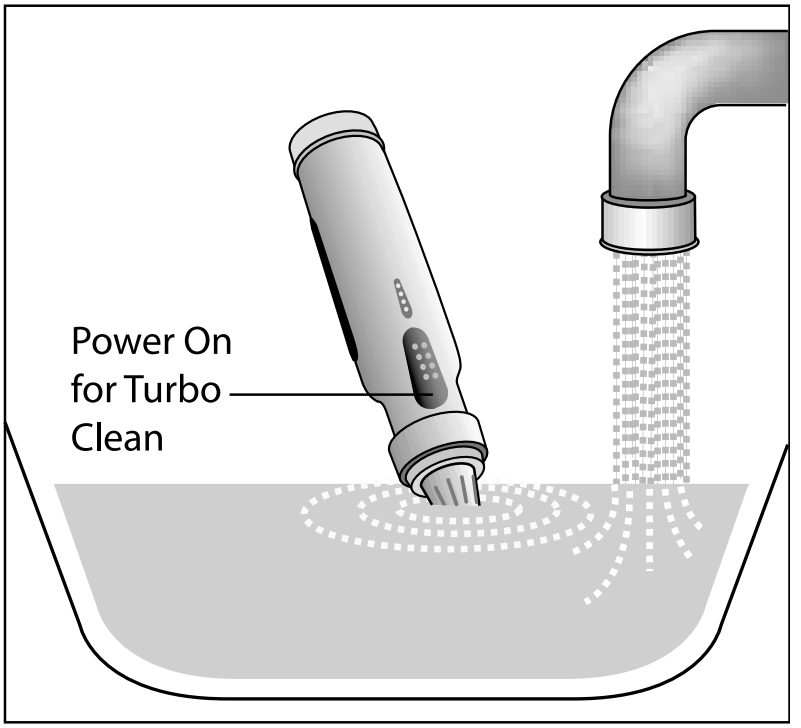

Method 2:

Rinse the head of the unit under running water and activate the motor for automatic Turbo-Clean rinse.

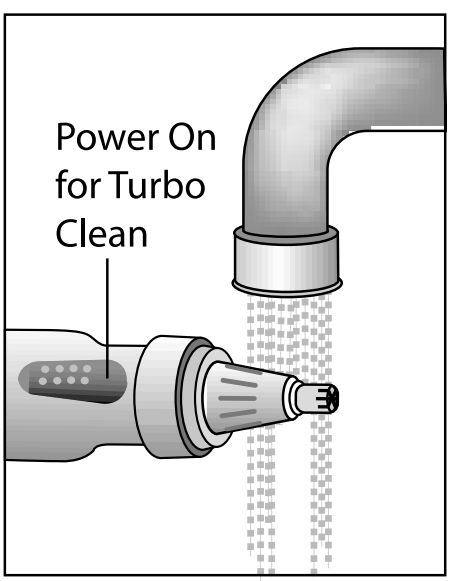

One-Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 11/04